



How to measure existing window sash openings:

The sash opening **width** is measured from the inside face of jamb to jamb. The sash opening **height** is measured from the inside face of the head jamb to the point where the outside of the bottom sash meets the sill.


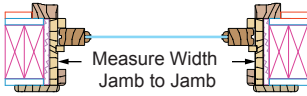


Customer Note: *If the inside and outside sash opening size are not equal, fill the deeper pockets with wood to match the smaller for more accurate sizing and easier installation.*

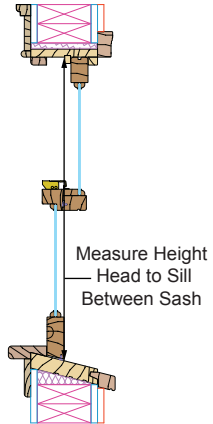

How to measure screen openings for full screens:

Measure the screen opening **width** from side casing to side casing. Measure the screen opening **height** from the head casing to the point where the screen will rest on the sill.

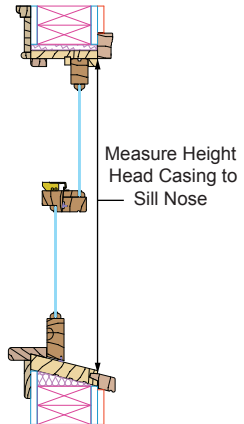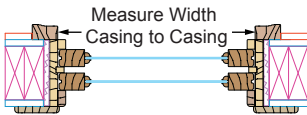

How to measure sill angle:

Using an inside miter gauge, measure the angle of the sill. 14° is standard.

